



KART INSTRUCTION MANUAL

BEFORE YOU BEGIN... SET YOUR CHAIN MONKEY


Step 1: Set the chain to the tension you require using your normal method.

Step 2: Hook your Chain Monkey onto the chain. Tighten the centre bolt until all slack is removed from the chain.

Step 3: Using a spanner, tighten the locking nut up to the orange base while all slack is taken from the chain. Once complete, your Chain Monkey will be set to the required tension.


STEP 1 MOUNT CHAIN MONKEY

Loosen the chain and hook your Chain Monkey onto the chain.

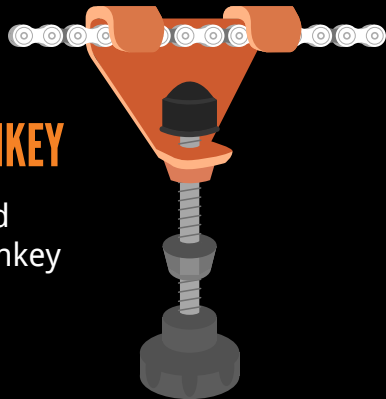


STEP 2 TIGHTEN CHAIN MONKEY

Tighten the centre bolt of your Chain Monkey until the locking nut touches the orange base.

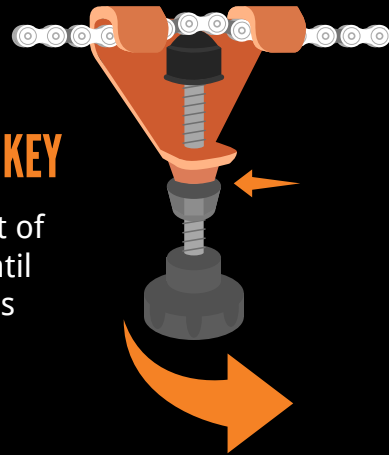

STEP 3 TIGHTEN CHAIN

Tighten the chain ensuring all slack is removed.

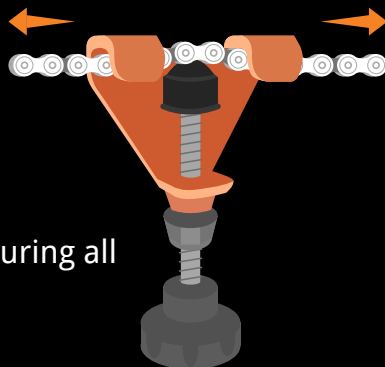

STEP 4 AND YOU'RE DONE!

Undo centre bolt and remove your Chain Monkey.



Note: To ensure the chain sets correctly, press down on top of the engine to certify that it is sat flat against the chassis rails and does not rock while being tightened.

